



Honeywell

VISTA-128BPT User Guide

www.bkconnectedsolutions.com

office@bkcs-inc.com

(540)662-0084

(after hours press #2 to reach on call technician)

Monitoring Central Station is Affiliated

(800)434-4000

*****Alarm calls will be from New Jersey phone number**

Section 37: Quick Guide to System Functions



Function	Procedure	Comments
Check Zones	Press [*].	To view faulted zones when is system not ready
Display All Descriptors	Press and hold[*] for 5 seconds.	Displays all alpha descriptors programmed by installer.
Arm System	<ol style="list-style-type: none"> 1. Enter code. 2. Press arming key desired (AWAY, STAY, INSTANT, MAXIMUM). 	Arms system in mode selected. NOTE: After pressing the STAY or INSTANT arming key, enter 1, 2 or 3 to arm in the desired STAY or INSTANT mode.
Disarm System	Enter code. Press OFF [1].	Disarms system and silences alarms.
Bypass Zones	<ol style="list-style-type: none"> 1. Enter code. Press BYPASS [6]. 2. Enter zone numbers to be bypassed (use 3-digit entries). 	Bypassed zones are unprotected and will not cause an alarm if violated.
Quick Bypass	<ol style="list-style-type: none"> 1. Enter code. Press BYPASS [6]. 2. Press[#]. 	Bypasses all faulted zones automatically.
Group Bypass	<ol style="list-style-type: none"> 1. Enter code. Press BYPASS [6]. 2. Press [*]. Enter Group Number COI-15) 	Bypasses all zones assigned to the group.
Chime Mode	Enter code. Press CHIME [9].	Keypad will sound if doors or windows are violated while system disarmed.
Test Mode	Enter code. Press TEST [5]	Activates alarm sounder and allows sensors to be tested.
View Messages	Press and hold [OJ for at least 5 seconds.	Message from central station will appear.
View User Capabilities	Enter user's code. Press [*] + [*].	Displays partitions & authority levels assigned to the user.
<i>GOTO Partition</i>	<ol style="list-style-type: none"> 1. Enter security code. Press [*]. 2. Enter partition number (1-8). 3. O returns to default partition. 	Allows a user at one keypad to perform functions in another partition, if that user is authorized to do so.
Self-Help	Press and hold any function key for at least 5 seconds.	Will display abbreviated instructions for the key pressed.
Add a User	<ol style="list-style-type: none"> 1. Enter master/manager code. 2. Press CODE [8]. 3. Enter new user's user number. 4. Enter code for that user. 5. Enter authority for that user in this partition (1-5). 6. Follow prompts, I=Yes, O=No. 	Master & Manager level users can add users to the system. each with its own code and authority level.

Quick Guide to System Functions (cont'd)

Change a User's Code	<ol style="list-style-type: none"> 1. Enter master/manager code _ 2. Press CODE[8]_ 3. Enter user's 3-digit number _ 4. Enter new code for that user. 5. Press O (No) at prompt. 	Master & Manager level users can change their own or other users' codes.
Delete a User	<ol style="list-style-type: none"> 1. Enter master/manager code. 2. Press CODE [8]. 3. Enter user no_ to be deleted. 4. Enter master/manager code_ 5. Press 1 (Yes) at prompt. 	<p>Master & Manager level users can delete users.</p> <p>A user can only be deleted by a user with higher authority level.</p>
Real-Time Clock	Enter Master code_ Press [Ju + [63]_	Press[*] or[#] to move cursor. Enter time and date accordingly. Press any key C0-9) for AM/PM.
Control Output Device	Enter security code_ Press[]	Activate output device as programmed.
	Enter 71 or 72_	Activate output device manually
Randomize Output Device	Enter security code. Press []	Activate output device or system event instantly
	Enter 77	Randomize output devices set for random schedules
	Enter security code. Press !Ju	Randomize output devices set for random schedules with activation times between 6 PM and 5AM
Access Control	Enter 41	Randomize output devices set for random schedules with activation times between 6 PM and 5AM
	Enter security code. Press @	Exit multi-partition multi-panel mode and multi-panel view mode.
	Enter 42_	Activate access relay for current partition_
	Enter O_	Request to enter or exit at a console.
	Enter security code	Request to enter or exit at an access point.
	Press [#]_ Enter 73.	
	Enter security code	
	Press [#]. Enter 74.	
	Enter access point number.	
	Enter security code. Press W-	Change the access point state.
	Enter 75. Enter access point number.	
	Enter state (1-3)	